


PARTS LIST

In the unlikely event you are missing any components please call 0117 934 1790 and state the name of the product, size and description of the item. i.e. Classic Gothic Arch Matt Black 1.2m, End Plug.

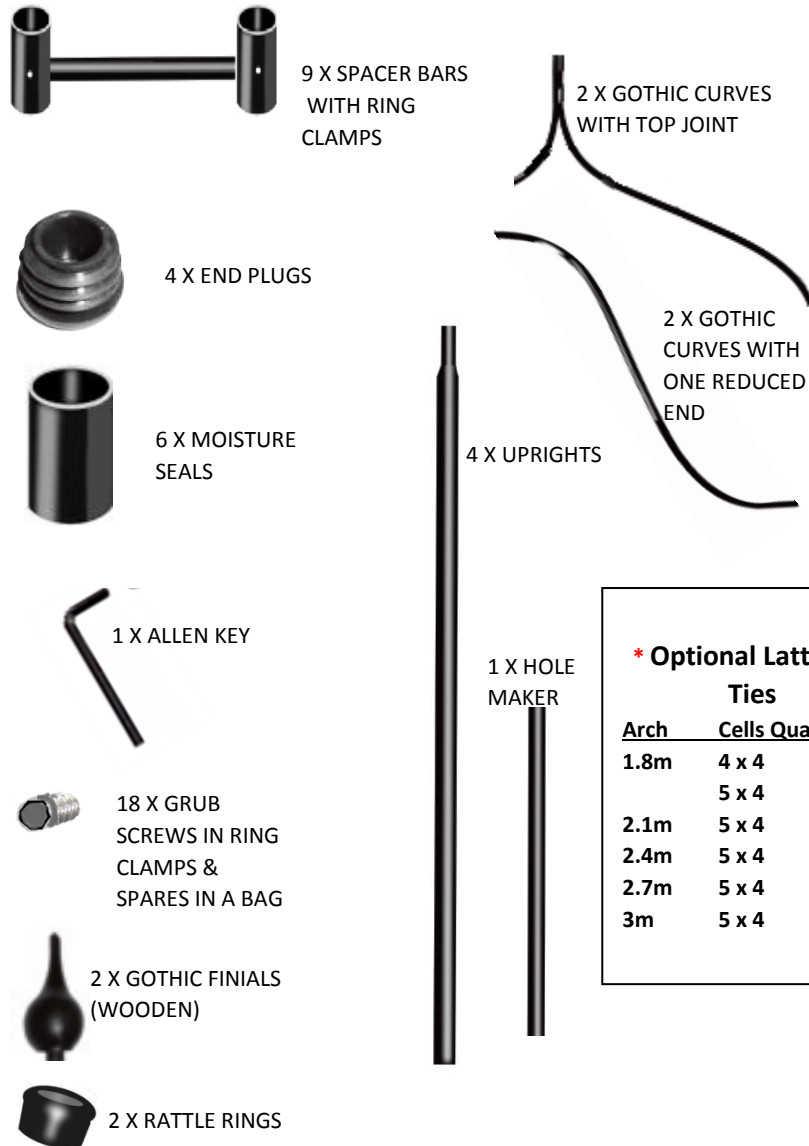

* Optional Lattice & Ties

Arch	Cells	Quantity
1.8m	4 x 4	2
	5 x 4	2
2.1m	5 x 4	4
2.4m	5 x 4	4
2.7m	5 x 4	4
3m	5 x 4	4

AGRIFRAMES, Journal House, Hartcliffe Way, Bristol, BS3 5RJ
ORDERS (0)117 934 1790 **FAX** (0)117 934 1791 **ORDER ONLINE** www.agriframes.co.uk

Agriframes™

Assembly Instructions for Classic Extra Gothic Arch Matt Black

Product Code: 40126-TBK, 40127-TBK, 40128-TBK, 40129-TBK & 40120-TBK



Please read the assembly instructions carefully prior to construction.

Tips:

Positioning of the Spacer Bars

In many cases the position of the Spacer Bars is down to personal preference. However, if you have the lattice option you will need to leave the correct distance between bars.

On the bottom section the Spacer Bars need to be at least 3 inches above the base of the tube.

Tips:

Spacer Bars

Before positioning the Spacer Bars on the uprights, half screw in the grub screws to the ring clamps on the spacer bars, to reduce the risk of losing the screws. Once correctly positioned tighten the grub screw to secure the spacer bar to the uprights.

Lattice Panel Option

For illustrative purposes we have only shown one side fixed with the lattice panels. Attach panels to both sides as you proceed.

Issues:






If you are experiencing any issues with your Agriframes product please contact our customer services team on 0117 934 1790 and quote your order reference.

WARNING: Contains small parts, tools and plastic bags. Keep children away until the unit is assembled and everything is cleared away.

NOTE: The card, paper sack, and polythene bags are recyclable - please dispose of carefully.

MISSING PARTS PROCEDURE: Please call our customer service team on 0117 934 1790 and quote your order reference and quote the missing part. *E.g. ASO-----, 2 uprights missing.*

CLASSIC EXTRA GOTHIC ARCH - MATT BLACK

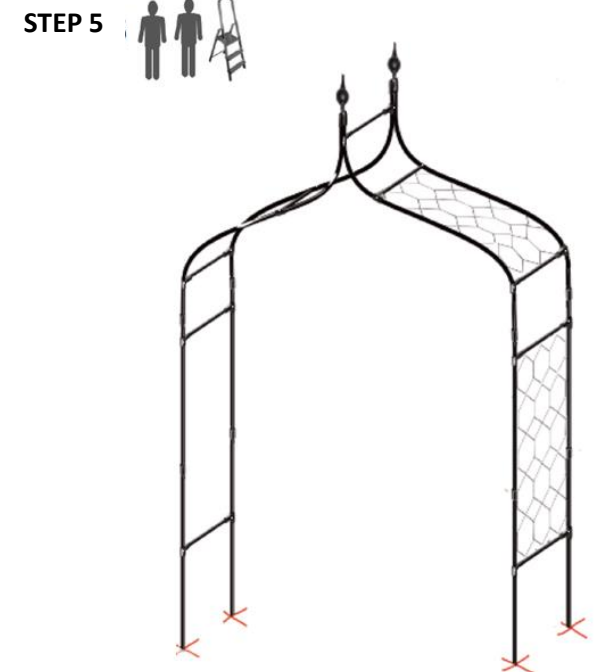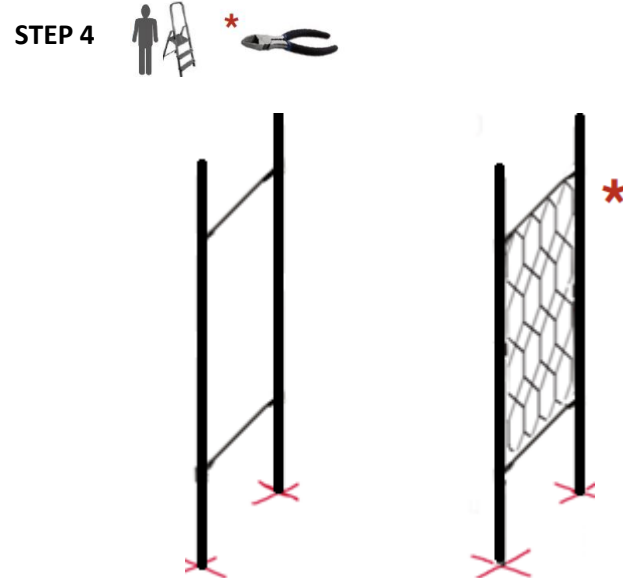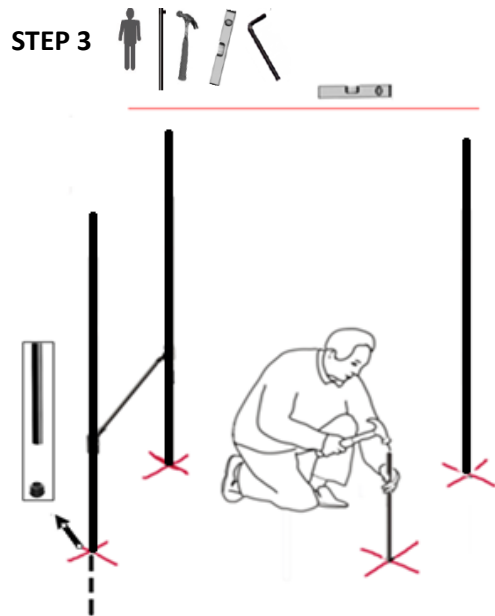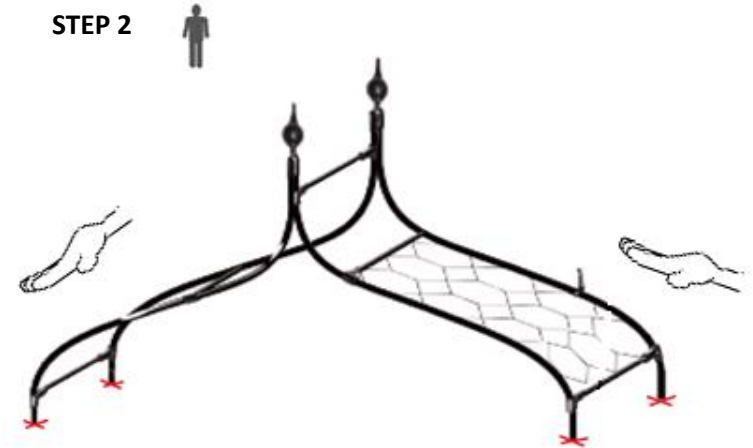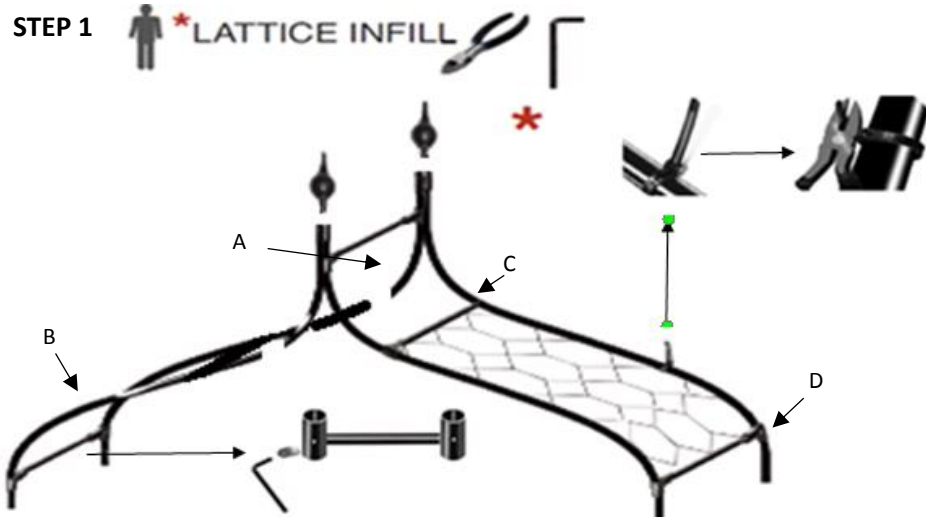

* ONLY FOR ORDERS WITH LATTICE PANELS. PANELS CAN BE ORDERED FROM www.agriframes.co.uk

Assembly Instructions for Classic Extra Gothic Arch - Matt Black

Please read these instructions carefully.

Assembly requires: a Rubber Mallet, an Allen Key (provided), a ladder, spirit level and a tape measure.

Step 1:

- Before assembly check Spacer Bars to ensure the grub screws are inserted into the holes on the ring clamps.
 - Loosen these grub screws ½ way out of the hole, to ensure when the ring clamps are moved into position the grub screw does not scratch the outer coating of the metal.
 - Connect one of the spacer bars to the top of the Gothic Curves with the top joint and tighten the grub screws on the bar until the bars are secured to the curves. If you try to move the spacer bar it should stay in place. Slide a moisture seal over the 2 short ends (shown as Point A in Step 1) of each Gothic Curve.
 - Insert the remaining Gothic Curves (shown as Point B) into Point A, and cover the join with a moisture seal.
 - Slide the spacer bars on both sets of curves, as shown in Step 1. Position one Spacer Bar at Point C and another Spacer Bar at Point D, on both sides of the curves.
 - If you have chosen the lattice option then the spacer bar at point D will need to be placed 50" (40" for 1.8m width arches) away from point C.
- Positioning of the horizontal bar**
In many cases the position of the horizontal bars is down to personal preference. However, if you have the lattice option you will need to leave the correct distance between bars. The spacer bars on the bottom upright need to be at least 3 inches above the base of the tube.
- Insert the Rattle Ring into the top of the arch and then insert the Gothic Finial.
 - **Attach the lattice using the cable ties, once the ties are secured trim the excess.**

Step 2:

- Once the top of the arch has been completed move the structure to where the structure will be installed and, firmly push the structure into the ground to make an impression, indentation or mark where the uprights should be placed. Then remove the top structure and check that the marks can clearly be seen.

Step 3:

- Using the hole-maker make a hole 15" into the ground, where you have marked or indented the ground previously, ensure that the holes are vertical and to the same depth.
- Insert the end plugs into the non-reduced ends of 4 uprights and insert these uprights into the holes in the ground, end plugs facing downwards
- Slide the bottom spacer bars onto the reduced end of the upright.

Step 4:

- Slide the next spacer bar onto the top of the uprights, then tighten the grub screws. Slide a moisture seal over the reduced end of the upright.
 - If you are have chosen the lattice option you will need to position the lower Spacer Bars approximately 14” above the ground. A gap of 50” must be left between the spacer bars on the uprights to allow for the lattice panels.
 - If you are not using lattice the positioning of the Spacer Bars can be adjusted to suit, however there needs to two Spacer Bars on each set of uprights and two Spacer Bars on the curve to ensure that the structure is stable.
- **Attach the lattice using the cable ties, once the ties are secured trim the excess.**

Step 5:

- Lift the constructed Arch top onto the uprights, cover the joins with moisture seals.
 - You will need at least 2 people for this step due to the weight of the Arch top.

If you have any questions regarding assembly please call our customer service team on 0117 934 1790