


## PARTS LIST

In the unlikely event you are missing any components please call 0117 934 1790 and state the name of the product, size and description of the item. i.e. Classic Extra Monet Arch Matt Black 1.8m, End Plug.

### MONET ARCH CURVES

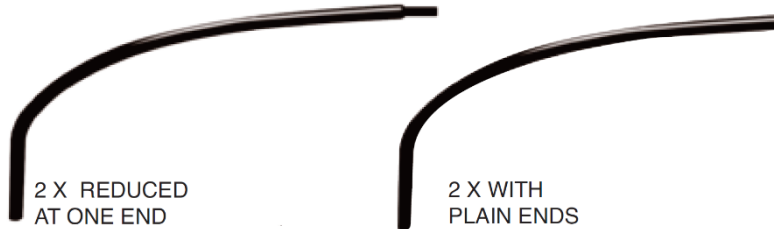

4 X END PLUGS



6 X MOISTURE SEALS



1 X ALLEN KEY



16 X GRUB SCREWS IN RING CLAMPS & SPARES IN A BAG



4 X UPRIGHTS  
1 X HOLE MAKER



8 X SPACER BARS WITH RING CLAMPS

### \* Optional Lattice & Ties


Arch	Cells	Quantity
1.5m	4 x 4	4
1.8m	4 x 4 5 x 4	2 2
2.1m	5 x 4 4 x 4	2 2
2.4m	5 x 4	4
2.7m	5 x 4	4
3.0m	5 x 4	4

# Agriframes™

## Assembly Instructions for Classic Extra Monet Arch

### Matt Black

Product Code: 40135-TBK, 40136-TBK, 40137-TBK, 40138-TBK, 40139-TBK & 40130-TBK

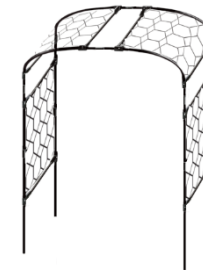

Please read the assembly instructions carefully prior to construction.

#### Tips:

##### **Positioning of the Spacer Bars**

In many cases the position of the Spacer Bars is down to personal preference. However, if you have the lattice option you will need to leave the correct distance between bars.

The bottom section the Spacer Bars must be at least 3 inches above the base of the tube.

#### Tips:

##### **Spacer Bars**

Before positioning the Spacer Bars on the uprights, half screw in the grub screws to the ring clamps on the spacer bars. This reduces the risk of losing the screws. Once correctly positioned tighten the grub screw to secure the spacer bar to the uprights.

##### **Lattice Panel Option**

For illustrative purposes we have only shown one side fixed with the lattice panels. Attach panels to both sides as you proceed.

#### Issues:

If you are experiencing any issues with your Agriframes product please contact our customer services team on 0117 934 1790 and quote your order reference.

**WARNING:** Contains small parts, tools and plastic bags. Keep children away until the unit is assembled and everything is cleared away.

**NOTE:** The card, paper sack, and polythene bags are recyclable - please dispose of carefully.


**MISSING PARTS PROCEDURE:** Please call our customer service team on 0117 934 1790 and quote your order reference and quote the missing part. *E.g. ASO-----, 2 uprights missing.*

**AGRIFRAMES**, Journal House, Hartcliffe Way, Bristol, BS3 5RJ


**ORDERS** 0117 934 1790 **FAX** + (0)117 934 1749 **ORDER ONLINE** [www.agriframes.co.uk](http://www.agriframes.co.uk)

# CLASSIC EXTRA MONET ARCH - MATT BLACK


## STEP 1 \* LATTICE INFILL

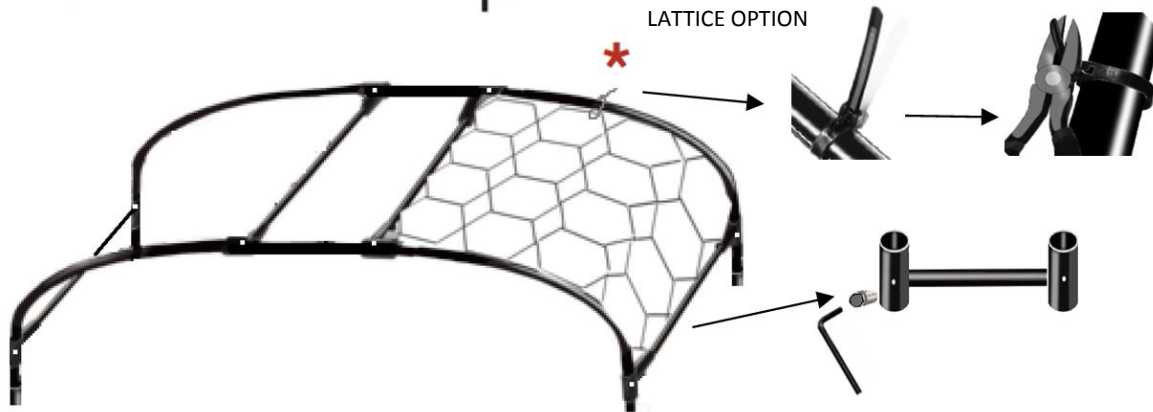


## STEP 2

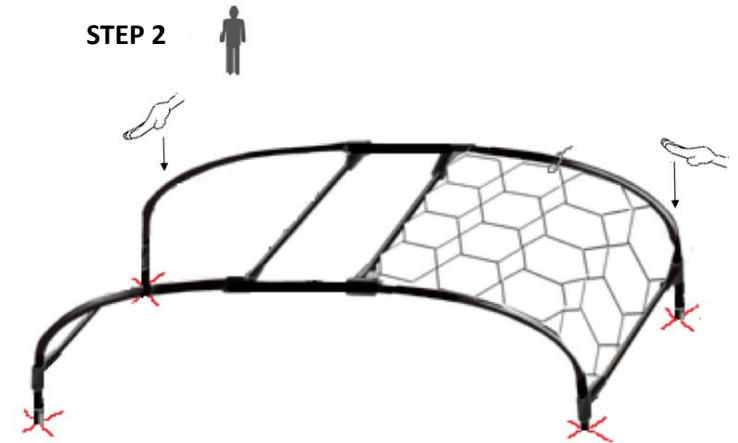


## STEP 3

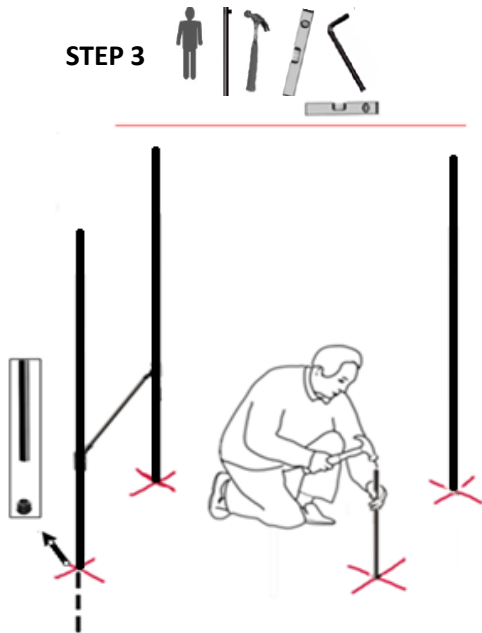

## STEP 4

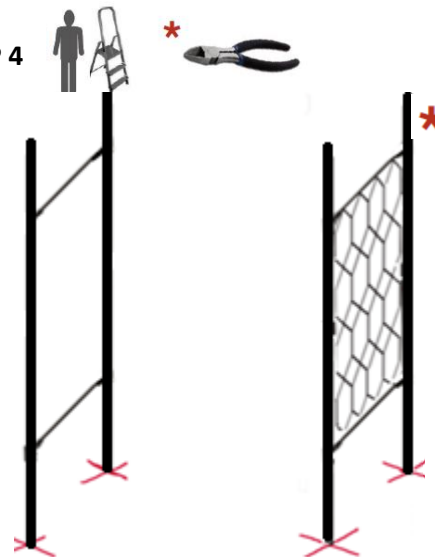

## STEP 5

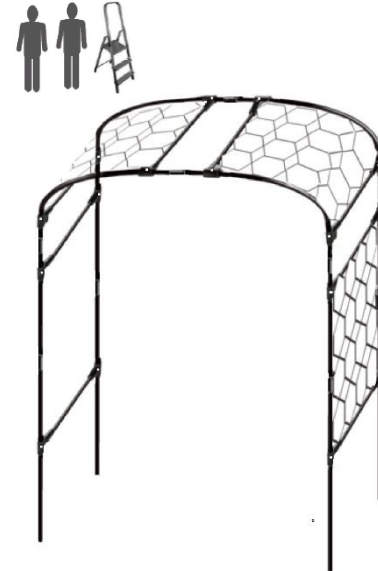

\* ONLY FOR ORDERS WITH LATTICE PANELS. PANELS CAN BE ORDERED FROM [www.agriframes.co.uk](http://www.agriframes.co.uk)

# Assembly Instructions for Classic Extra Monet Arch Matt Black

Please read these instructions carefully.

**Assembly requires:** a rubber mallet, an allen key (provided), ladder, spirit level and tape measure.

## Step 1:

- Before assembly check Spacer Bars to ensure the grub screws are inserted into the holes on the ring clamps.
  - Loosen these grub screws ½ way out of the hole, to ensure when the ring clamps are moved into position the grub screw does not scratch the outer coating of the metal.
- Connect the Monet arch curves (insert the reduced end into the plain ended curve) and cover the joint with a moisture seal.
- Slide the spacer bars on both sets of Monet curves and tighten the grub screws until the spacer bars are secured into place on the curves.
  - If you have chosen the lattice option then position the top spacer bar, near the join of the curves, 40" (50" for 2.4m. 2.7m & 3m width arches) away from the lower spacer bar.

### **Positioning of the horizontal bar**

In many cases the position of the horizontal bars is down to personal preference. However, if you have the lattice option you will need to leave the correct distance between bars. On the bottom section the spacer bars need to be at least 3 inches above the base of the tube.

- **Attach the lattice using the cable ties, once the ties are secured trim the excess.**

## Step 2:

- Once the top of the arch has been completed move the structure to where it will be installed. Firmly push the top of the arch into the ground to make an impression, indentation or mark where the uprights should be placed. Then remove the top structure and check that the marks can clearly be seen.

## Step 3:

- Using the hole-maker make a hole 15" into the ground, where you have marked or indented the ground previously, ensure that the holes are vertical and to the same depth.
- Insert the end plugs into the non-reduced ends of 4 uprights and insert these uprights into the hole in the ground, with the end plugs facing downwards.
- Slide the bottom spacer bar onto the reduced end of the uprights.

## Step 4:

- Slide the next spacer bars onto the top of the uprights, then tighten the grub screws. Slide a moisture seal over the reduced end of the upright.
  - If you have chosen the lattice option you will need to position the lower Spacer Bars approximately 14" above the ground. 50" (40" for 1.5m, 1.8m & 2.1m width arches) must be left between the spacer bars on the uprights to allow for the lattice panels.
  -

- If you are not using lattice the positioning of the Spacer Bars can be adjusted to suit, however there needs to be two Spacer Bars on each set of uprights and two Spacer Bars on the curve to ensure that the structure is stable.
- **Attach the lattice using the cable ties, once the ties are secured trim the excess.**

**Step 5:**

- Lift the constructed Arch top onto the uprights, cover the joins with moisture seals.
  - You will need at least 2 people for this step due to the weight of the Arch top.

**If you have any questions regarding assembly please call our customer service team on 0117 934 1790**